

i02583998

Maintenance Interval Schedule

When Required

Battery - Replace	52
Battery or Battery Cable - Disconnect	53
Engine - Clean	59
Engine Oil Sample - Obtain	62
Fuel System - Prime	66
Severe Service Application - Check	71

Daily

Cooling System Coolant Level - Check	56
Driven Equipment - Check	58
Engine Air Cleaner Service Indicator - Inspect	61
Engine Oil Level - Check	62
Fuel System Primary Filter/Water Separator - Drain	67
Walk-Around Inspection	73

Every 250 Service Hours or 1 Year

Battery Electrolyte Level - Check	53
Fuel Tank Water and Sediment - Drain	69

Initial 500 Service Hours

Engine Valve Lash - Inspect/Adjust	65
--	----

Every 500 Service Hours

Belts - Inspect/Adjust/Replace	54
--------------------------------------	----

Every 500 Service Hours or 1 Year

Aftercooler Core - Clean/Test	52
Engine Air Cleaner Element (Single Element) - Inspect/Replace	59
Engine Crankcase Breather - Replace	61
Engine Mounts - Inspect	62
Engine Oil and Filter - Change	63
Fuel System Primary Filter (Water Separator) Element - Replace	67
Fuel System Secondary Filter - Replace	68
Hoses and Clamps - Inspect/Replace	70
Radiator - Clean	71

Every 1000 Service Hours

Engine Valve Lash - Inspect/Adjust	65
--	----

Every 1000 Service Hours or 1 Year

Electronic Unit Injector - Inspect/Adjust	58
---	----

Every 2000 Service Hours

Alternator - Inspect	52
----------------------------	----

Water Pump - Inspect	74
----------------------------	----

Every 3000 Service Hours or 2 Years

Cooling System Water Temperature Regulator - Replace	57
Crankshaft Vibration Damper - Inspect	57
Engine Protective Devices - Check	65
Engine Speed/Timing Sensors - Check/Clean/ Calibrate	65
Turbocharger - Inspect	72

Every 5000 Service Hours

Starting Motor - Inspect	72
--------------------------------	----

Every 6000 Service Hours or 3 Years

Cooling System Coolant (ELC) - Change	55
---	----